## SAMIK 4 STANDARD SET UP



# ALL TABLES HAVE BEEN ACCU-VENDED UNLESS OTHER WISE INSTRUCTED

### **PCB PROGRAMME SET-UP**

PRESS & RELEASE SW1 FOR BATTERY & METER READINGS
PRESS & HOLD SW1 UNTIL **A1** APPEARS,
RELEASE & PRESS SW1 TO ADVANCE PROGRAM **AND CONFIRM ANY CHANGES**SETTINGS SHOULD READ:

A1 P0 O2 C1

USE SW2 + SW3
TO ALTER SETTINGS

#### COIN MECH SET-UP

#### FIRSTLY ASCERTAIN IF IT IS A T20B OR T21B COIN MECH

T20B
ENSURE ALL DIP SWITCHES ARE DOWN
SWITCH 6 & 4 UP
ENTER P.O.P

SWITCH 4 DOWN SWITCH 4 UP AGAIN

SWITCH 1 UP

ENTER 9 X £1.00 COIN

SWITCH 1DOWN,4 DOWN 6 DOWN

**INHIBIT COINS** 

SWITCH 6&5 UP

ENTER COIN

SWITCH 5 & 6 DOWN

**AUTHORISE** 

SWITCH 6 & 5 UP ENTER COIN SWITCH 5 DOWN RE-ENTER COIN

SWITCH 6 DOWN

PLAY BUTTON

UNUSED

MOTOR

POWER
SUPPLY

MECHANICAL COIN
COUNTER MECH

#### T21B

RECENT MECHS HAVE THE No 2 SWITCH UP TO WORK. BEFORE YOU START CHECK WHETHER THIS SWITCH IS UP OR DOWN

**ENSURE ALL SWITCHES ARE DOWN** 

SWITCH 6&5 UP

ENTER COIN-IT WILL BE REJECTED

SWITCH 1 UP ENTER P.O.P SWITCH 1 DOWN SWITCH 2 UP

ENTER 9 X £1.00 COIN

SWITCH 2 DOWN,5 DOWN,6 DOWN

SWITCH 2 UP IF NEEDED

#### **INHIBIT COIN**

REMOVE POWER LEAD
ENSURE ALL SWITCHES ARE DOWN
RE-CONNECT POWER LEAD
SWITCHES 6,5,4,3 ON
ENTER COIN IT WILL BE REJECTED
SWITCH 3 OFF,SWITCH 4 OFF
SWITCH 4 ON
ENTER COIN TO BE INHIBITED

**AUTHORISE COIN** 

REMOVE POWER LEAD

ENSURE ALL SWITCHES ARE DOWN

**RE-CONNECT POWER LEAD** 

SWITCH 4 OFF,5 OFF,6 OFF

**SWITCHES 6,5,4,3 UP** 

ENTER COIN -IT WILL BE REJECTED SWITCH 3 OFF, SWITCH 4 OFF

ENTER COIN TO BE AUTHORISED SET SWITCH 5, SWITCH 6 OFF.

SAM LEISURE UK 024 7646 1234 FAX 024 7646 4433 FOR TECHNICAL ASSISTANCE

UNUSED