

# Jofemar T20 & T21

for SAM Air Hockey older models



## COIN MECH SET-UP

### FIRSTLY ASCERTAIN IF IT IS A T20B OR T21B COIN MECH

#### T20B

ENSURE ALL DIP SWITCHES ARE DOWN  
SWITCH 6 & 4 UP  
ENTER P.O.P  
SWITCH 4 DOWN  
SWITCH 4 UP AGAIN  
SWITCH 1 UP  
ENTER 9 X £1.00 COIN  
SWITCH 1 DOWN, 4 DOWN 6 DOWN

#### INHIBIT COINS

SWITCH 6&5 UP  
ENTER COIN  
SWITCH 5 & 6 DOWN

#### AUTHORISE

SWITCH 6 & 5 UP  
ENTER COIN  
SWITCH 5 DOWN  
RE-ENTER COIN  
SWITCH 6 DOWN

#### T21B

**RECENT MECHS HAVE THE No 2 SWITCH UP TO WORK. BEFORE YOU START CHECK WHETHER THIS SWITCH IS UP OR DOWN**  
ENSURE ALL SWITCHES ARE DOWN  
SWITCH 6&5 UP  
ENTER COIN-IT WILL BE REJECTED  
SWITCH 1 UP  
ENTER P.O.P  
SWITCH 1 DOWN  
SWITCH 2 UP  
ENTER 9 X £1.00 COIN  
SWITCH 2 DOWN, 5 DOWN, 6 DOWN  
**SWITCH 2 UP IF NEEDED**

#### INHIBIT COIN

REMOVE POWER LEAD  
ENSURE ALL SWITCHES ARE DOWN  
RE-CONNECT POWER LEAD  
SWITCHES 6,5,4,3 ON  
ENTER COIN IT WILL BE REJECTED  
SWITCH 3 OFF, SWITCH 4 OFF  
SWITCH 4 ON  
ENTER COIN TO BE INHIBITED  
SWITCH 4 OFF, 5 OFF, 6 OFF

#### AUTHORISE COIN

REMOVE POWER LEAD  
ENSURE ALL SWITCHES ARE DOWN  
RE-CONNECT POWER LEAD  
SWITCHES 6,5,4,3 UP  
ENTER COIN -IT WILL BE REJECTED  
SWITCH 3 OFF, SWITCH 4 OFF  
ENTER COIN TO BE AUTHORISED  
SET SWITCH 5, SWITCH 6 OFF.

*SAM LEISURE UK 024 7646 1234 FAX 024 7646 4433 FOR TECHNICAL ASSISTANCE*